



# WALL MOUNT RANGE HOOD

USER MANUAL

## TROUBLE SHOOTINGS


CAUTION: Disconnect the power supply before servicing.


STATUS	CAUSE AND METHOD OF REPAIRING	TOOL
The power supply is damaged	If the power supply is damaged, please call the technicians to repair.	"+" type Screwdriver Sharp Pincers
The motor does not run	A) The motor was broken, replace a new motor assembly. B) The switch control was broken, replace a new motor assembly. C) The capacitance was broken, replace a new motor assembly.	"+" type Screwdriver
The unit body shake	A) The installation is not firm enough. Check it and make sure the hood is firm enough. B) The fan is broken, so it is not balance. Replace a new motor assembly. C) The motor does not firm enough. Check it and install it firmly enough.	"+" type Screwdriver
Big noise	A) Some other things drop to the blower. Check and clean it.	"+" type Screwdriver
Suction not so powerful	A) The distance from the range hood to the gas cooker is too big. Make sure the distance is about 650-700mm. B) There are many windows or doors in the kitchen, the air convection is too big. Close some doors or windows, smaller the air convection. C) There have some other pour wind to the exhaust pipe. Make the exhaust pipe's exit to downwards. D) The run rate of motor decrease obviously. Replace a new motor or capacitance. Because of the Range Hood is set upon the window, the best solution is that put one threeply board on the back of the Range Hood for covering the hollow of window.	"+" type Screwdriver
Bulb does not work	Replace with a new LED lamp assembly.	"+" type Screwdriver

## READ AND SAVE THESE INSTRUCTIONS MANUAL


### CONTENTS

TECHNICAL CHARACTERISTICS.....	1
BODY SIZE .....	1
MAIN PARTS NAME .....	2
INSTALLATION REQUIREMENT.....	3
INSTALLATION PROCEDURES.....	4-6
OPERATING INSTRUCTION.....	6-8
MAINTENANCE.....	9
REPLACE LIGHT BULB.....	9
IMPORTANT SAFETY INSTRUCTIONS.....	10-11
TROUBLE SHOOTINGS.....	12


Please note that this product is marked with this symbol:   
According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product, Please do NOT dispose of this product with house hold waste. Please send this product to WEEE collecting points where available.

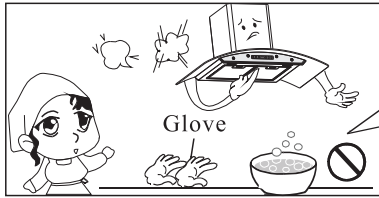


Wear protective glove before you start to clean the hood. Remove the components gently when you clean!

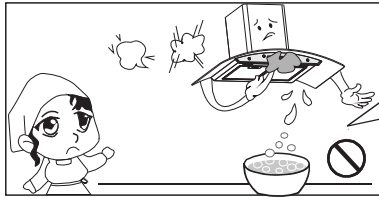


Don't wash the key parts with water or other kind of liquid. For the liquid may inpour the hood body cause electrical problem.

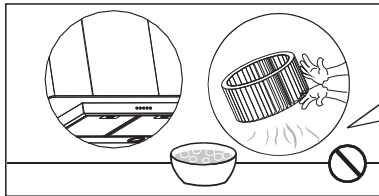

Be more carefully when clean the blower. Don't impact the blower and don't move the blower's knob, otherwise it will cause the body shake and big noise.

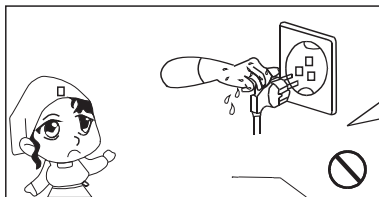

Never pull out the plug by wet hand to avoid the possibility of electric shock.

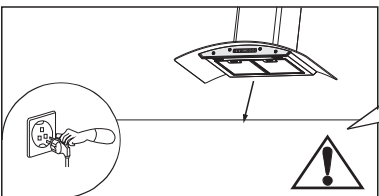

If along time you don't use the appliance, please pull out the plug!

Dear consumer,

Thanks for your purchase of our cooker hood and we hope we can fully satisfy all of your needs. Please read entire instructions carefully before proceeding to obtain the best results of using the cooker hood.

## TECHNICAL CHARACTERISTICS

Model NO.: ☐ 668A/KT(750) ☐ 668A/KT(900)

Total power: 154W

Speed motor: 150W

Lights: 2x2W

Voltage: 120V


Frequency: 60Hz

Filter: ☐ 6-layer filter ☐ Baffle filter


Control: ☐ Soft touch control ☐ Push button ☐ Touch control

☐ Highly-sensitive touch control


## BODY SIZE

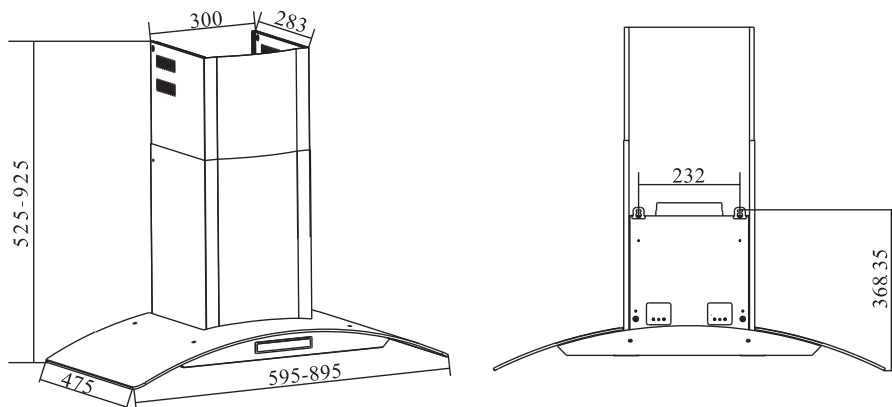

## IMPORTANT SAFETY INSTRUCTIONS:

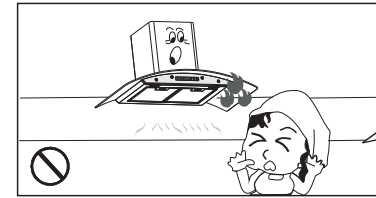


Do not connect the air outlet to other fuel's chimney or combustion gas ducts.

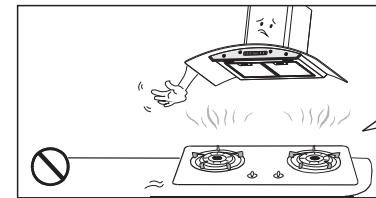


Do not leave naked flames under this hood



In case of any damage of the power cable, replace the broken cable with a new one by an experienced person.

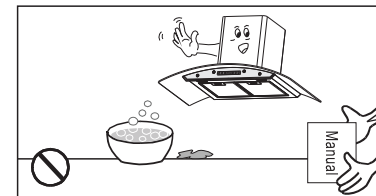

Do clean the hood in according to the instruction stated or it might cause the possibility of fire accident

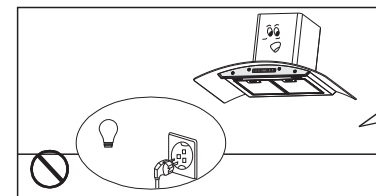

The bulb should be replaced by an experienced person, Halogen bulb no more than 10W, LED bulb no more than 2W.

## MAINTENANCE

*CAUTION: NEVER PUT YOUR HAND INTO THE AREA HOUSING THE FAN WHILE THE FAN IS OPERATING.*

*FOR THE OPTIMAL LEVEL OF OPERATION, CLEAN THE COOKER HOOD SURFACE, FAN, AND ALUMINIUM FILTER REGULARLY.*

1. Use only mild soap or detergent solutions to clean the cooker hood surface.  
Dry surfaces using soft cloth.
2. Using a stainless steel cleaner to bring the glow back into a stainless steel finish.
3. Clean the aluminium filter once a week or according to use status. Press the clamp of the aluminium filter slightly, take off the aluminium filter and put it into warm soapy water using mild detergent, wipe the aluminium filter with soft brush.  
Replace the filter after it is dry. Or it can wash in dishwasher.
4. Clean the blower assembly once half an year and use it according to this manual for better effect!.
5. DO NOT clean the motor with water or other liquid.

## TO REPLACE LIGHT BULB


*CAUTION: LAMP UNIT MAY BE HOT! WAIT UNTIL THE UNIT IS COOL. AND USE THE SAME TYPE LIGHT BULB!*

Caution: LED lamp can not replace a new bulb, just can replace a new LED lamp.


Make sure all the control switches are off, and the cooker hood is unplugged!

Please follow the below instructions:

1. Take out the filters, and cut off the wire connection of the lamp.
2. Press the spring according to the arrow direction, then you can take off the lamp unit.
3. You can replace a new LED lamp unit no more than rating!
4. Then put the lamp unit to the hood in reverse direction. Connect the wire of the lamp.
5. Fit on the filters.


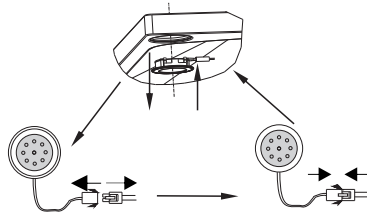


## MAIN PARTS NAME

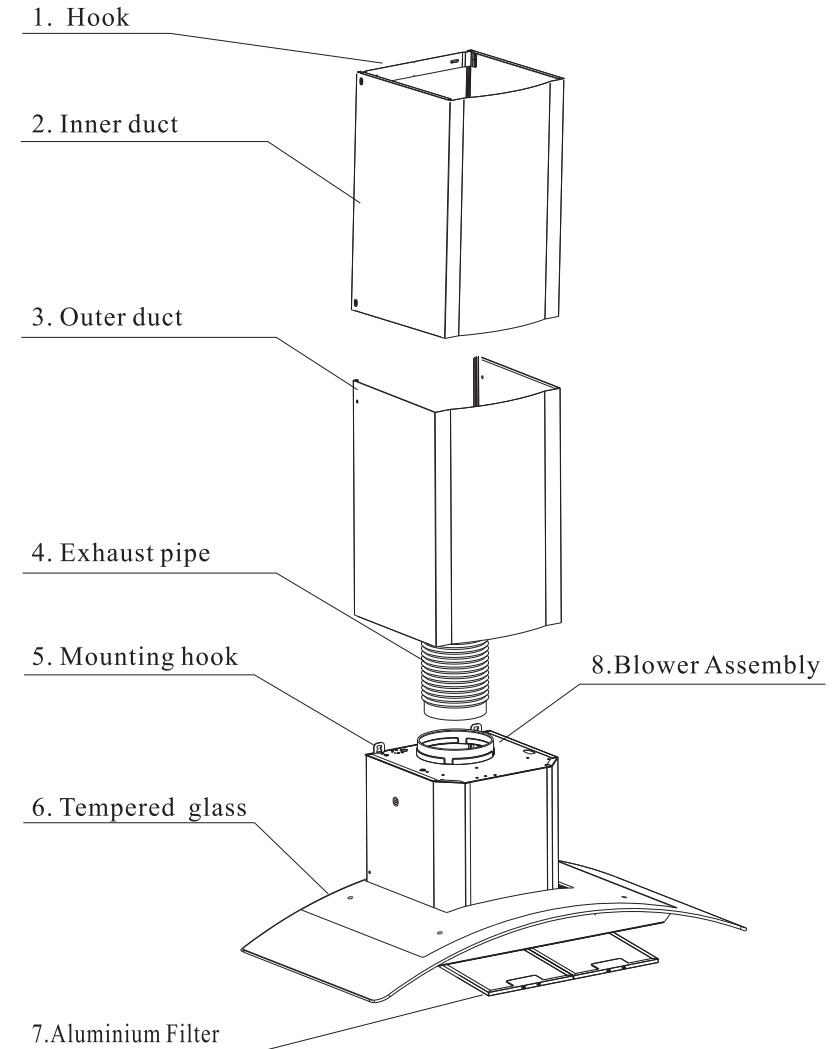

## INSTALLATION REQUIREMENT

1. Do not install the cooker hood where there have many doors or windows. For the air convection will effect the exhaust efficiency of the hood.(Fig.1)
2. Install the cooker hood right above the hob.The recommended distance between the hob and the lower edge of the cooker hood is minimum 650 mm and maximum 700mm. (Fig. 2)
3. In order to get the optimum performance, do not elongate the exhaust pipe too long, and try to make the bend of exhaust pipe less and biggest, ensure the connection is airtight.(Fig. 3)
4. After hanging the unit on the wall, ensure the hood is level and vertical. (Fig. 4)
5. The air outlet must not be connected to chimney flues or combustion gas ducts. The air outlet must under no circumstances be connected to ventilation ducts for room in which fuel-burning appliances are installed.

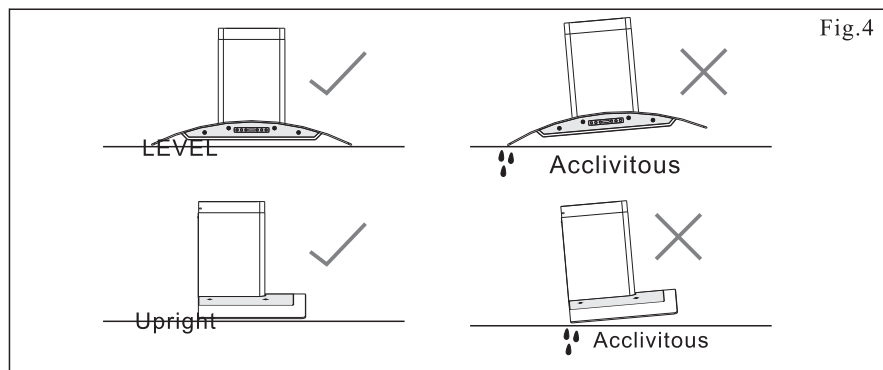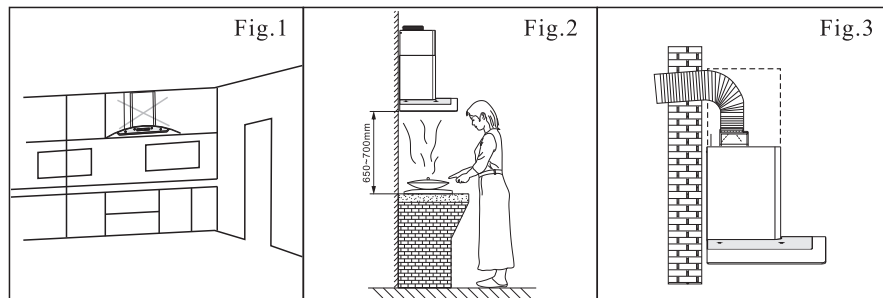

5.This switch is highly-sensitive touch control, use your figure touch the key-press slightly to operate it. And this switch with gas sensor and heater sensor function.



**A: Receiver:** point the remote control at the receiver when used.

**B: Timer:** Touch this button one time, you could starting a countdown from 1 minute. It could add 1 more minute if you touch it again, the Maximum time you could set is 60 minutes.

**C: Speed:** Touch this button, the hood would starting at High speed, touch it again, the Middle speed runs, touch it thrice, it is Low speed. And the motor stops after being touched four times.

**D: Auto:** The screen of the switch will show "AUTO" after 1 minute, if you touch this button once. Then the hood is in automatic state. It means that the smoke&heat sensor is working then. Touch this button again, the hood will return to the normal state. When in automatic state, the motor and the lamps will turn on automatically if the smoke or the temperature in kitchen near the hood increase rapidly.And it would turn off automatically when the smoke or/and the temperature decreased.(PS: When the hood is in automatic state, other buttons of the switch and the remote control are both could not be operated.)

**E: Lighting:** Touch this button one time, the lamps will turn on.Touch it again, the lamps will turn off.

**F: Motor On/Off:** Touch this button one time when the hood is working, it will prolong working 1 minute. Touch it twice, the hood will trun off.


**G: Clock:** When the hood is not working, touch this button for 3 seconds, then you could use button C to set the hour, and the button D to the second.

Note:


- 1.The control has electron already, please pull out the plastic paper before you use the remote control.
- 2.The longevity of electron is about one year. Dispose of weak electron properly, never throw them into fire.
- 3.Point your remote control at the receivers without any block.
- 4 The remote control can operate up to 4meter away from the hood, if you are directly facing the front of the hood. Operating distance diminishes as you move to the side of Hood.

### Electron changing::


- 1.Open the electron cover,refer to pic 1.
2. When open, pls pay attention to the anode and cathode, refer to pic 2.
- 3.Take out the old electro and charge a new one, then make sure the anode is as pic 3.

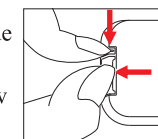

Pic 1

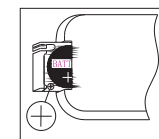

Pic 2

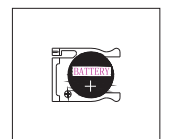

Pic 3

## 2.How to use the **push button control**

 
A: Press Button A once, turn on the light. Press it again, turn off the light.

B: Press button B, the fan runs at the boost speed.

C: Press button C, the fan runs at the second speed.

D: Press button D, the fan runs at the low speed.

E: Press button E, the fan turns off.



## 3. How to use the **touch control**

 
A: Press Button A once, turn on the light. Press it again, turn off the light.

B: Press button B, the fan runs at the boost speed.

C: Press button C, the fan runs at the middle speed.

D: Press button D, the fan runs at the low speed.

E: Press button E, the fan turns off.



## 4.How to use the **soft touch control**



A: Touch A, the fan runs at the low speed. Press it again, the fan turns off.

B: Touch B, the fan runs at the mid speed. Press it again, the fan turns off.

C: Touch C, the fan runs at the high speed. Press it again, the fan turns off.

**A、B、C three buttons interact.**

D: When the hood is OFF, press and hold D for 3 seconds, and then press C (to adjust the minute) and E (to adjust the hour) respectively, G acts like a clock. On the screen, left side is hour and the right side is minute; When the hood is operating, touch D to control working time of hood, 1 minutes per one touch, the longest stay ON time is 1 hour.


E: Press E, turns on the light. Press it again to turn off the light.

F: Delay formation: when the hood is operating press F, the hood will not be OFF at once, it will remain for one minute before it is OFF.

## INSTALLATION PROCEDURES


### SAFETY WARNING

*HOOD MAY HAVE VERY SHARP EDGES; PLEASE WEAR PROTECTIVE GLOVES IF IT IS NECESSARY TO REMOVE ANY PARTS FOR INSTALLING, CLEANING OR SERVICING.*

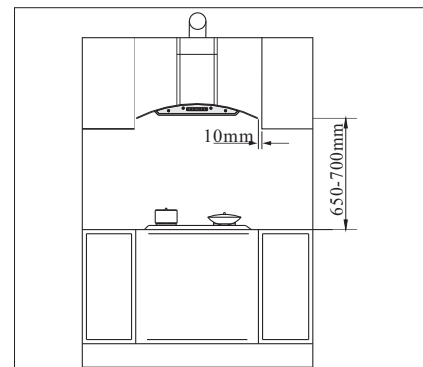


### Step 1:

Please put the cooker hood on the wall and mark the position where you want to install. We recommend the height from the hob to the lower edge of the hood should be from 650mm to 700mm.

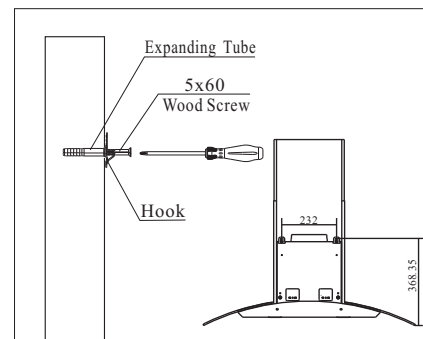

### Step 2:


According the space between the hole A&B, drill 2 holes in level on the wall with 8mm in diameter and 60-70mm in depth. Press the 2 expanding tube provided into the holes. Tighten the 2 wood screws of 5x60mm which supplied together with the hood to the expanding tube. Make sure it is fixed enough and cannot be move. Hang the cooker hood on the 2 wood screws, make sure it is to be level and stable.

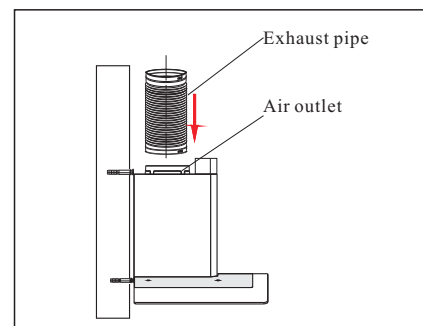


### Step 3:

Take out the cooker hood from the carton and put it on a horizontal work table gently. Fix the exhaust pipe into the air outlet of the inner duct, and then fix the exhaust pipe into the top of reducer, make sure it is connected to the reducer tightly.




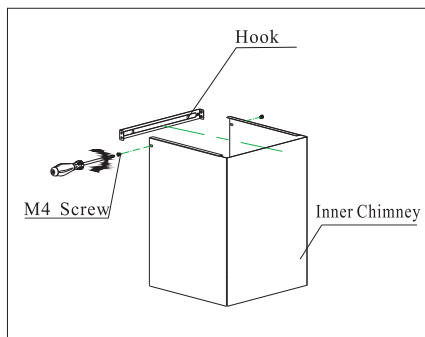


**Step 4:**  
Matching the bracket to the holes of the inner duct cover and fix it well with M4 screws.

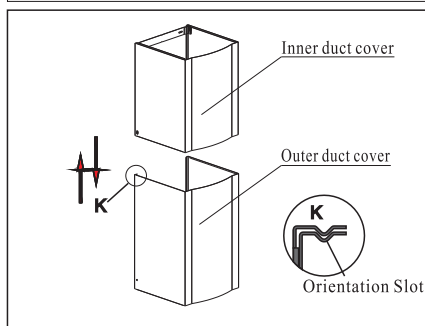

**Step 5:**  
Insert the inner duct cover into the outer duct cover. Please kindly note that the inner duct cover must fix to the outer duct cover's orientation slot.

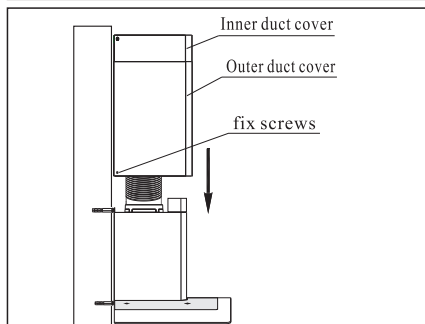


**Step 6:**  
Put the outer duct cover to the unit body, and use two M4x10 screws to fix the outer duct cover to the unit body.

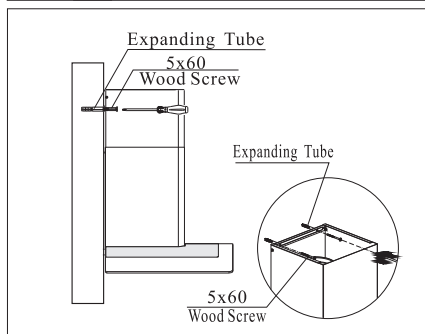


**Step 7:**

1. Extend the inner chimney to the height which you want. And mark the two holes of the inner chimney's hook on the wall.
2. Put down the inner duct cover gently, using 8mm drill to drill two holes in 60-70 mm depth on the wall which you marked just now.
3. Press the expanding tube into the holes.
4. Extend the inner chimney and tighten it to the expanding tubes with two 5x60 wood screw.

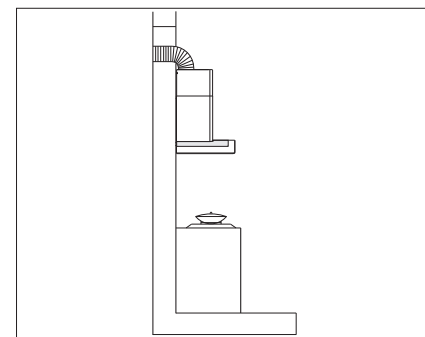

**Step 8:**  
Extend the exhaust pipe to the vent-pipe of your building or to outside. Try to make the bend of the exhaust pipe is more than 120°

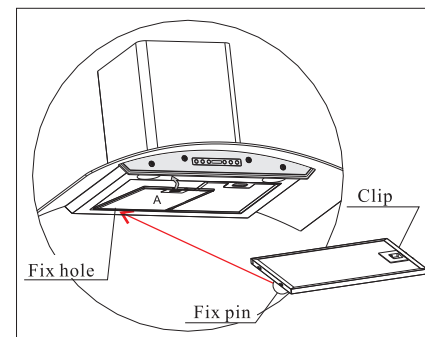

**Step 9:**  
Install filter. Put the fix pin to the fix hole and press down the filter's clip gently as the direction of arrow A.

## OPERATING INSTRUCTION

### 1. How to use the **touch control**

A: Press controller A once, turn on the light. Press it again, the light turns off.  
B: Press controller B once, the fan runs at the boost speed. Press it again, the fan turns off.  
C: Press controller C, the fan runs at the second speed. Press it again, the fan turns off.  
D: Press controller D, the fan runs at the low speed. Press it again, the fan turns off.

